



\*Loose Pillow Back options incur an additional charge.



1 - Semi-Attached Boxing



2 - Loose Pillow Boxing\*



3 - Loose Pillow Knife Edge\*





# **Examples**

#### **Standard Pillows**

8100 pieces with welt cord: Style **#13, 22"** pillows with welt cord 8200 pieces with top stitched seams: Style **#12, 22"** pillows without welt cord





8121-10 Sofa Welts, Panel Arm, Semi-Attached Back Standard with one pair style #13, 22" pillows



Welts, Deco Arm, Semi-Attached Back Leather pieces are not standard with pillows



**8231-30** Leather Chair Top Stitch, Track Arm, Semi-Attached Back





8100-41 Ottoman 1/2 Welts, No Arm, No Back


8131-14 LAF Sofa 8131-45 RAF Chaise Welts, Track Arm, Semi-Attached Back Standard with two pair style #13, 22" pillows



Welts, Deco Arm, Loose Pillow Knife Edge Back Standard with two pair style #13, 22" pillows

## **NAILHEAD OPTIONS**


The 8000 series is not standard with nailhead, however it is an option. If nailhead is selected, it will be applied in the format shown below. Nailhead will be applied to the bottom of the base. It may be applied to the Panel Arm only, as the other arms cannot accept nailhead.

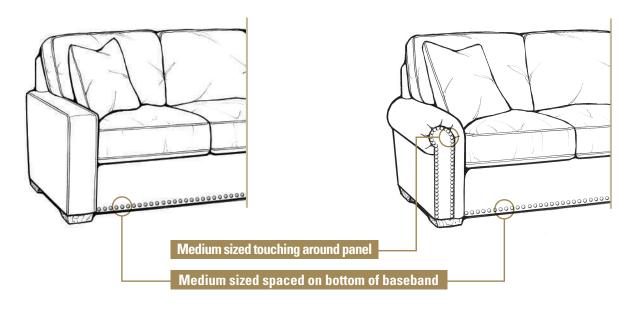

### SAMPLE CONFIGURATIONS

#### SAMPLE CONFIGURATION DIMENSIONS REPRESENT PANEL AND SOCK ARMS WITH SEMI-ATTACHED BACKS

(SEE BELOW FOR EXCEPTIONS). Diagrams below are not to scale. All dimensions are approximate and subject to change without notice.

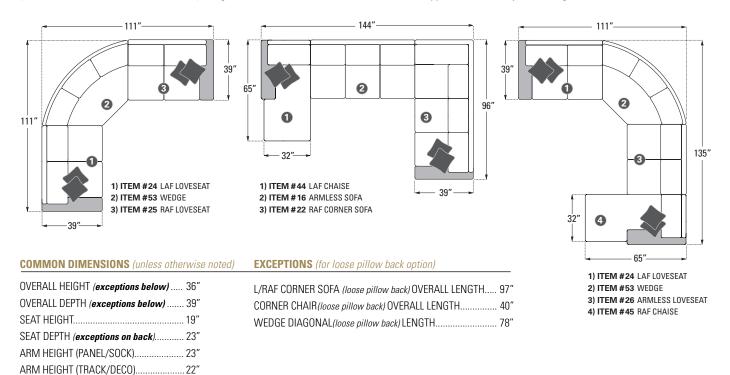


#### **EXCEPTIONS**

**TRACK ARM:** Subtract 3" <u>PER ARM</u> from overall frame length. Inside length does not change. **DECO ARM:** Subtract 2" <u>PER ARM</u> from overall frame length. Inside length does not change.

LOOSE PILLOW BACK: Add 1" to overall depth and overall height for pieces with loose pillow backs. Seat depth does not change.

### -----LEATHER LOOSE PILLOW BACKS -





Leather loose pillow backs feature a versatile fastening system. This method keeps the back cushions in place, as leather has a tendency to be slippery, causing them to slide down over the seat cushion.

## **8000 SERIES** | AVAILABLE PIECES


**EXCEPTIONS** 

WEB VERSION: DIAGRAMS NOT TO SCALE PILLOWS ARE NOT STANDARD ON LEATHER


LAF = Left Arm Facing, RAF = Right Arm Facing

NOTE: Sock/Panel Arm with Semi-attached Back (8x11/8x21) example diagrams shown below TRACK ARM: Subtract 3" PER ARM from overall frame length. Inside length does not change. **DECO ARM:** Subtract 2" PER ARM from overall frame length. Inside length does not change. LOOSE PILLOW BACK: Add 1" to overall depth and overall height for pieces with loose pillow backs. Seat depth does not change. See inside for additional dimensions. All dimensions are approximate and subject to change without notice. See www.smithbrothersfurniture.com for more information. 81" 39 39 ITEM #11 MID-SIZE SOFA ITEM #10 SOFA ITEM #14 LAF SOFA ITEM #15 RAF SOFA INSIDE LENGTH: 71" INSIDE LENGTH: 60' INSIDE LENGTH: 71" INSIDE LENGTH: 71' 96" 96" 39' 65" ITEM #22 RAF CORNER SOFA ITEM #21 LAF CORNER SOFA **INSIDE LENGTH: 71' INSIDE LENGTH: 71'** - 32" - 32"-**ITEM #44 ITEM #45** LAF CHAISE **RAF CHAISE** 66' INSIDE LENGTH: 24" INSIDE LENGTH: 24" SEAT DEPTH: 48' SEAT DEPTH: 48" 39 39 67 **ITEM #53** 39 WEDGE 34" ITEM #20 LOVESEAT **INSIDE LENGTH: 47' ITEM #55 RAF END WEDGE** ITEM #54 LAF END WEDGE SEAT DEPTH: 39 SEAT DEPTH: 39 39' 52" ITEM #34 LAF CHAIR ITEM #35 RAF CHAIR **INSIDE LENGTH: 24"** INSIDE LENGTH: 24" 39 39 **←** 24"→ **ITEM #31 CHAIR 1/2 ITEM #24 LAF LOVESEAT** ITEM #25 RAF LOVESEAT ITEM #30 CHAIR 24' INSIDE LENGTH: 25" INSIDE LENGTH: 47 INSIDE LENGTH: 47 INSIDE LENGTH: 32 **ITEM #42 CHAISE OTTOMAN** HEIGHT: 19' **←24″→** - 33"-40" 39" 39 39 25' **ITEM #32 ITEM #36 ITEM #26 ITEM #16 ITEM #40** ITEM #41 **CORNER CHAIR** ARMLESS ARMLESS LOVESEAT ARMLESS SOFA OTTOMAN OTTOMAN 1/2 HEIGHT: 16' **INSIDE LENGTH: 24"** CHAIR HEIGHT: 16"

**NOTE**: THE ARM STYLE CODE DOES NOT APPLY FOR THE #53 WEDGE. WHEN WRITING THE ITEM NUMBER, ENTER A "0" IN THAT POSITION.

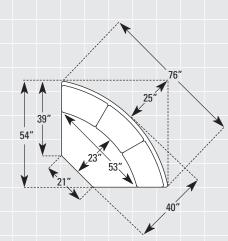


8x01-53 SEMI-ATTACHED BACK WEDGE OVERALL HEIGHT: 36"

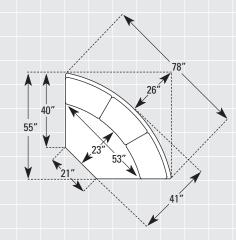

8x02-53/8x03-53 LOOSE PILLOW BACK WEDGE OVERALL HEIGHT: 37"



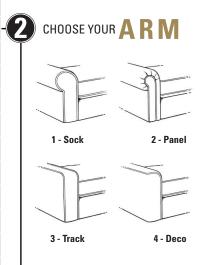



#### COMMON DIMENSIONS: SEAT HEIGHT......19"

Fabric sofas come standard with one pair of 22" style #12 for top stich or #13 pillows for welt. Leather is not standard with pillows.

not standard with pillows. Please refer to the price list for details.


NOTE: Style code examples with an x represent the possibility for multiple choices in the style codes shown. For example, seam choices do not affect dimensions and are represented with an x in the diagram 8x32-53.

For more information, visit www.smithbrothersfurniture.com.

## 8000 SERIES | 8xxx-54/55 Semi-attached Back End Wedge


Page 1: Semi-Attached Back 8xx1-54/54 Diagrams WEB VERSION: DIAGRAMS ARE NOT TO SCALE ALL DIMENSIONS ARE APPROXIMATE

LAF = Left Arm Facing, RAF = Right Arm Facing

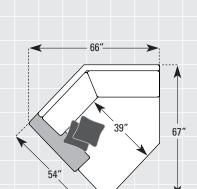


### LAF SEMI-ATTACHED BACK WEDGE

SOCK ARM PANEL ARM 8x11-54 8x21-54 OVERALL HEIGHT: 36" ARM HEIGHT: 23"

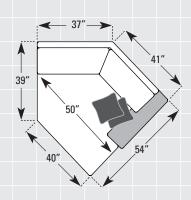


#### **RAF SEMI-ATTACHED BACK WEDGE**

SOCK ARM PANEL ARM 8x11-55 8x21-55 OVERALL HEIGHT: 36" ARM HEIGHT: 23"

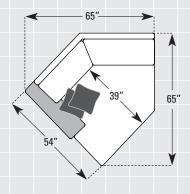

#### **LAF SEMI-ATTACHED BACK WEDGE**

TRACK ARM **DECO ARM** 8x31-54 8x41-54 OVERALL HEIGHT: 36" ARM HEIGHT: 22"

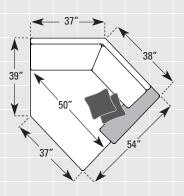


#### **RAF SEMI-ATTACHED BACK WEDGE**

TRACK ARM **DECO ARM** 8x31-55 8x41-55 OVERALL HEIGHT: 36" ARM HEIGHT: 22"





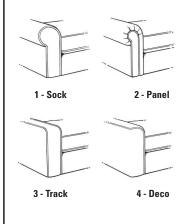







1 - Semi-Attached **Boxing** 

2 - Loose Pillow Boxing\*



3 - Loose Pillow, Knife Edge\*

\*Loose Pillow Back option incurs an additional charge

#### COMMON DIMENSIONS: SEAT HEIGHT......19"

Fabric sofas come standard with one pair of 22" style #12 for top stich or #13 pillows for welt. Leather is not standard with pillows.

Please refer to the price list for details.

NOTE: Style code examples with an x represent the possibility for multiple choices in the style codes shown. For example, seam choices do not affect dimensions and are represented with an x in the diagram 8x32-53.


For more information, visit www.smithbrothersfurniture.com.

## 8000 SERIES | 8xxx-54/55 Loose Pillow Back End Wedge

Page 2: Loose Pillow Boxing 8xx2-54/55 and Loose Pillow Knife Edge 8xx3-54/55 Diagrams WEB VERSION: DIAGRAMS ARE NOT TO SCALE


ALL DIMENSIONS ARE APPROXIMATE

LAF = Left Arm Facing, RAF = Right Arm Facing

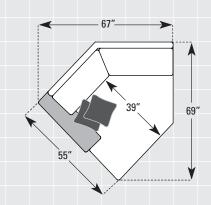


#### LAF LOOSE PILLOW BACK WEDGE

PANEL ARM **SOCK ARM** 8x12-54 8x22-54 8x13-54 8x23-54 OVERALL HEIGHT: 37" ARM HEIGHT: 22"

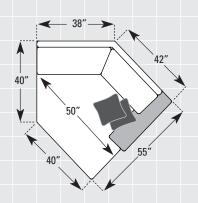


#### **RAF LOOSE PILLOW BACK WEDGE**

PANEL ARM **SOCK ARM** 8x12-55 8x22-55 8x13-55 8x23-55 OVERALL HEIGHT: 37" ARM HEIGHT: 22"

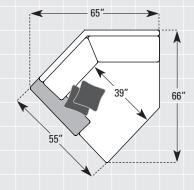

#### LAF LOOSE PILLOW BACK WEDGE


TRACK ARM **DECO ARM** 8x32-54 8x42-54 8x33-54 8x43-54 OVERALL HEIGHT: 37" ARM HEIGHT: 22"

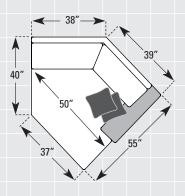

#### **RAF LOOSE PILLOW BACK WEDGE**

TRACK ARM **DECO ARM** 8x32-55 8x42-55 8x43-55 8x33-55 OVERALL HEIGHT: 37" ARM HEIGHT: 22"



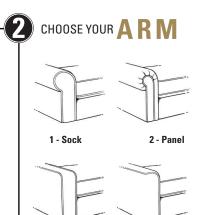

3 - Track

4 - Deco



#### COMMON DIMENSIONS: SEAT HEIGHT......19"

Fabric sofas come standard with one pair of 22" style #12 for top stich or #13 pillows for welt. Leather is not standard with pillows.

Please refer to the price list for details.

NOTE: Style code examples with an x represent the possibility for multiple choices in the style codes shown. For example, seam choices do not affect dimensions and are represented with an x in the diagram 8x32-53.

For more information, visit www.smithbrothersfurniture.com.